



Scottoiler: Suzuki Bandit 600 & 1200

Installation Guide for Suzuki Bandit 600 & 1200



Locate the vacuum – **Pre 2000 Bandit 600**: There is a rubber bung over a spigot on the inlet tract, as shown below left.

Remove this bung and then press the Damper Elbow, part number 4, onto the spigot.



All Bandit 1200's and all post 2000 600's: There is a vacuum pipe from the RHS of the right hand carburetor going to the fuel tap on the LHS of the bike, as shown in the third picture.

Cut into this pipe and insert the T-Piece from the Scottoiler Kit. Then press the Damper Elbow, part number 4, onto the third leg of the tee.



The RMV can be mounted under the seat, see bottom left, or behind the side panel, see below.

The more vertical the RMV the better and remember to avoid exhaust and engine components.

For further information, see our easy step installation guide – '**RMV Positions, General**'.






Note: Picture shows a similar Swingarm

The Dispenser Assembly, shown left, is routed along the underside of the Swingarm using Dispenser Mounting Sleeves, Cable Ties & Glue. **Note:** an epoxy resin (eg. Araldite) is req'd to bond the sleeves to the Swingarm.

For further information see our easy step installation guide - '**Dispenser Assemblies, General**'.

The nib should feed the sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards, as shown below left

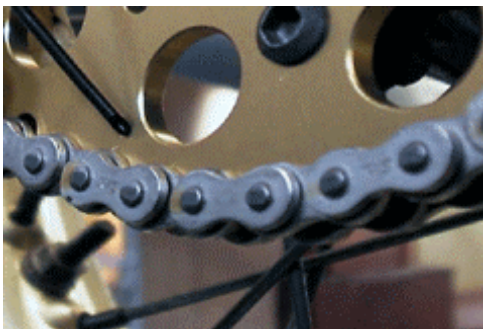

Note: This is a generic image

Once fitted, fill and prime the system and set the adjuster knob to 'prime'.

Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved.

Check the condition of your chain after a ride, and then adjust as required.



The Dual Injector (sold separately) is shown opposite.

The Dual Injector feeds oil onto both sides of the sprocket between the 6 & 7 o'clock positions.



The Lube Tube, flexible high capacity reservoir (sold separately) is shown opposite.

The Lube Tube can be mounted under the seat and increase the range of your Scottoiler from 700 miles to around 3000 miles.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.
Scottoiler Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

