



Scottoil: Honda Ace 750 Shadow

Installation guide for Honda Ace 750 Shadow





Locate the vacuum - there is a vacuum pipe, as shown below left. Cut into this pipe and insert the T-Piece from the Scottoil kit. Then press the Damper Elbow, part number 4, onto the third leg of the tee.

Alternatively, There is a vacuum point on the inlet tract, as shown below. Remove the screw and replace with the M5 Brass Spigot from the Scottoil kit, using some RTV Silicon Sealant on the threads to ensure an airtight seal. Then press the Damper Elbow, part number 4, onto the spigot.

The RMV can be positioned behind the LHS panel, as shown in the third picture.


The more vertical the RMV the better and remember to avoid exhaust and engine components.

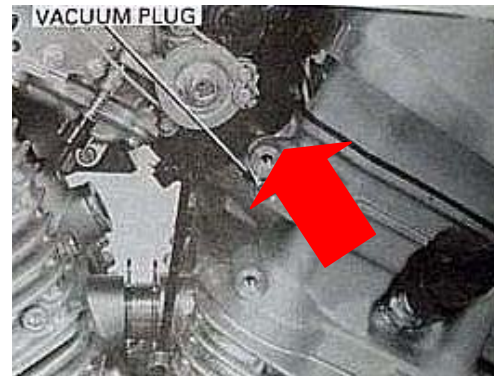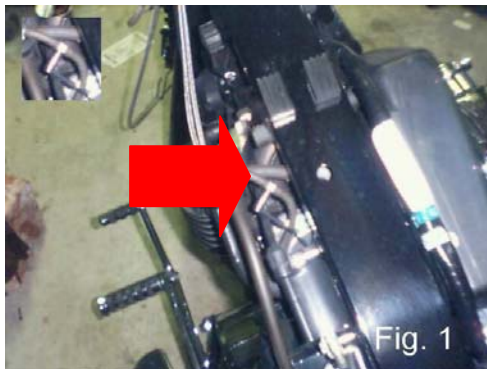

For further information, see our easy step installation guide – 'RMV Positions, General'.

The Dispenser Assembly, shown below left, is routed along the swing arm and secured using mounting pads, glue, and cable ties. The nib should feed the sprocket between the 6 & 7 o'clock positions, the cut face facing outwards, as shown below.

For further information on dispenser assemblies, see our easy step installation guide – '**Dispenser Assemblies, General**'.

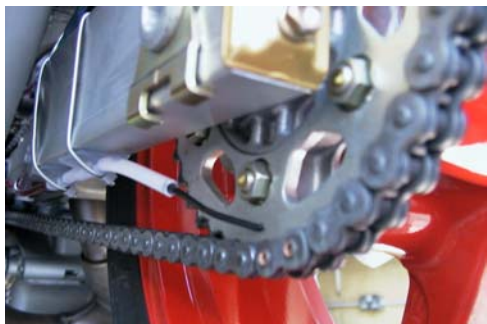

Note: This is a generic image

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

