



Scottoil: Triumph Trophy 1200

Installation Guide for Triumph Trophy 1200



Locate the vacuum – There is a rubber bung over a spigot on the inlet side of the carburetor, as shown below left. Remove this bung and press the Damper Elbow, part number 4, onto the spigot.

The RMV can be mounted under the seat or behind the number plate.

The more vertical the RMV the better and remember to avoid exhaust and engine components.

For further information, see our easy step installation guide – '**RMV Positions, General**'.



The Dispenser Assembly, shown below left, is routed along the underside of the Swingarm using Dispenser Mounting Sleeves, Cable Ties & Glue. **Note:** an epoxy resin (eg. Araldite) is req'd to bond the sleeves to the Swingarm.

For further information see our easy step installation guide - '**Dispenser Assemblies, General**'.

The nib should feed the sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards, as shown bottom left.




Note: Picture shows a similar Swingarm

Once fitted, fill and prime the system and set the adjuster knob to 'prime'.

Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved.

Check the condition of your chain after a ride, and then adjust as required.

The Dual Injector, sold separately, can be mounted using cable ties and the Dual Injector Block, as shown below.

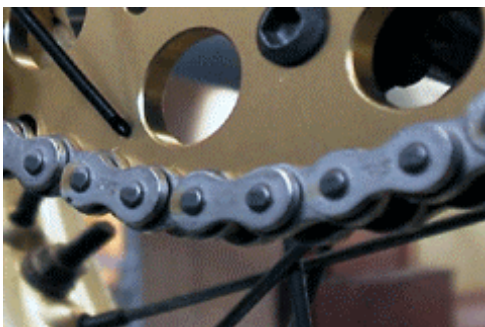

Note: This is a generic image



If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

